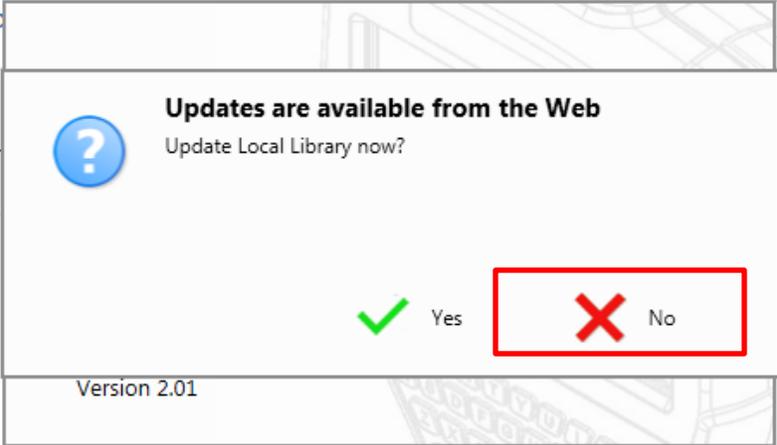
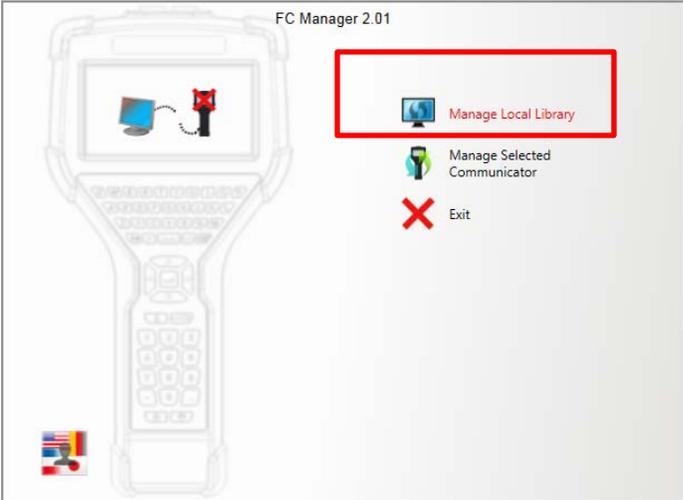
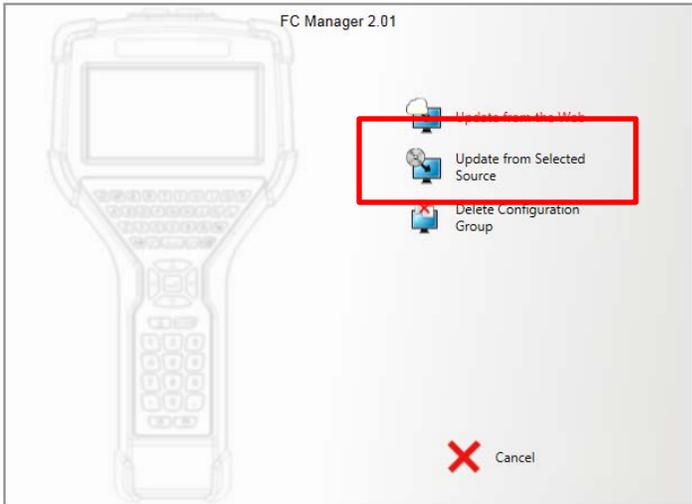
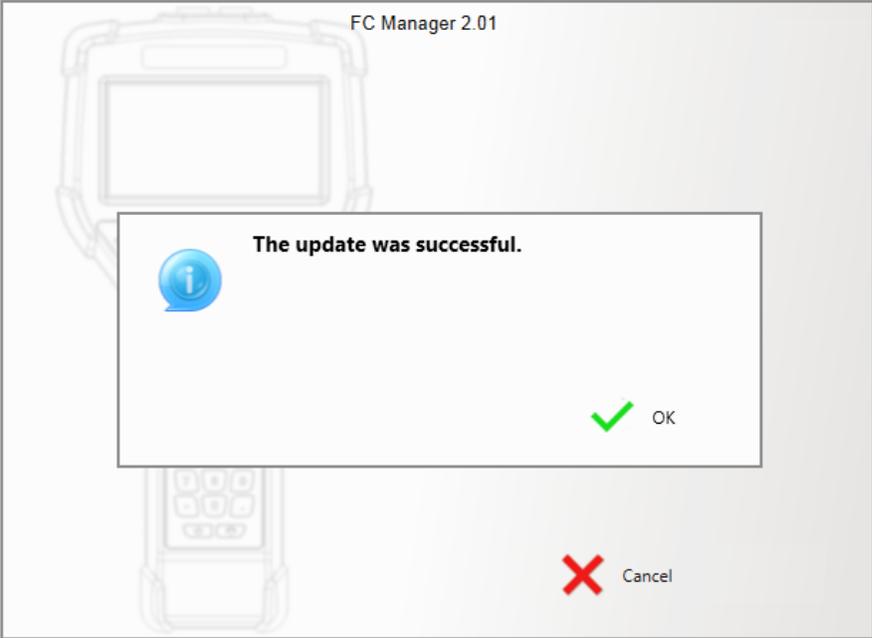


Updating FC Manager Library with a zip file

Overview: This guide leads you through the steps to install the zip file updates on your computer. For a successful installation, it is important that you follow the steps in order.

Steps	Actions
1.	Retrieve the zipped file updates from the website: http://www.5150update.com/5150 Library Update.zip .
2.	Unzip the file to your computer. Pay attention to the prompts of your unzip program. Important: Remember the location where you extracted the files. Note: Extracting requires about 316 MB of free space.
3.	Start the FC Manager program and select No when FC Manager displays this question, Update Local Library now? 

Steps	Actions
4.	<p>Select Manage Local Library.</p>  <p>The screenshot shows the FC Manager 2.01 interface. On the left is a faint outline of a handheld device. On the right, a menu is displayed with three options: 'Manage Local Library' (highlighted with a red box), 'Manage Selected Communicator', and 'Exit' (with a red X icon). The title 'FC Manager 2.01' is at the top right of the menu area.</p>
5.	<p>Select Update from Selected Source.</p>  <p>The screenshot shows the FC Manager 2.01 interface. On the left is a faint outline of a handheld device. On the right, a menu is displayed with three options: 'Update from the Web', 'Update from Selected Source' (highlighted with a red box), and 'Delete Configuration Group'. At the bottom right, there is a 'Cancel' option with a red X icon. The title 'FC Manager 2.01' is at the top right of the menu area.</p>
6.	Locate the extracted files on your computer.
7.	Open the file Update.fc in the 5150 Library Update folder.

Steps	Actions
8.	<p>When you see the message The update was successful, click OK.</p>  <p>The screenshot shows a grey background with a faint outline of a handheld device. At the top, it says "FC Manager 2.01". In the center, a white dialog box with a blue information icon contains the text "The update was successful.". At the bottom right of the dialog box is a green checkmark followed by "OK". Below the dialog box, there is a red "X" followed by "Cancel".</p>
9.	You can now update your communicator with the latest updates.